


ducan Vinyl Re-Fresh

New Life for Faded Sheet Vinyl

Reawaken the look of your faded vinyl decking.

Vinyl Refresh's tough durable formula is U.V. resistant, non-yellowing and a snap to clean!

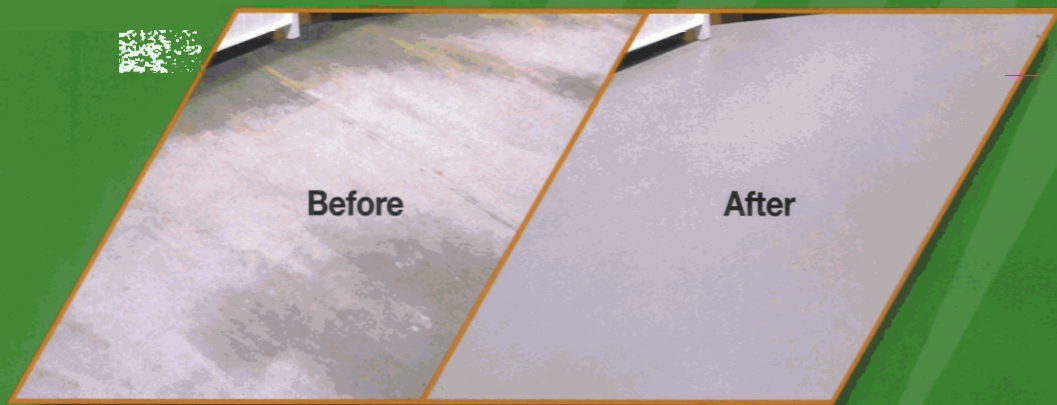

INSTRUCTIONS: Check overall integrity of your vinyl sheet surface, paying particular attention to seams or overlaps, around posts, cuts and tears that might be in your vinyl surface. Before beginning application of **Vinyl Re-Fresh**, please note problem solving techniques.

NEW APPLICATION (2 coats required)

DIRECTIONS:

1. Thoroughly clean the deck using **THE DUKE** – a powerful concentrated cleaner and degreaser. Dilute 10 to 1 with hot water and use a stiff bristle broom. Rinse with copious amounts of water. Let dry completely.
2. Stir the **Vinyl Re-Fresh** until no sediment remains in the bottom of the container.
3. With a brush, paint a full coat of **Vinyl Re-Fresh** around railing posts and all edges of the deck.
4. Prepare the roller and attach the extension.
5. Using a short nap roller, roll out the material at the rate of 150 sq. ft. to 200 sq. ft. per 1 U.S. gallon. **Two applications are necessary on previously uncoated vinyl sheet surfaces. Allow 2 to 4 hours before 2nd application can begin.**
6. Start the second application in a different corner and work at right angles to the first application. **Important: Thoroughly intermix** the contents of the remaining containers to ensure colour uniformity of the final coat. Repeat steps 2 thru 5.
7. **Curing time** Allow 24 to 48 hours to cure before permitting traffic on surface and placement of patio furniture.

REAPPLICATION (1 coat required)

- To maintain your deck surface, Ducan recommends a reapplication of **Vinyl Re-Fresh** every 3 to 4 years. Make a test patch when in doubt of compatibility with previous coatings.

HELPFUL PROBLEM SOLVING TECHNIQUES

Small cuts, punctures or tears – can be repaired by applying **OVERLAP CEMENT** to the underside of the vinyl. Reset vinyl in place. Use seam roller to roll down vinyl allowing **OVERLAP CEMENT** to squeeze out. Wipe excess clean immediately. Note: using a hair dryer will help in softening the vinyl.

Larger areas greater than 12" x 12" – place a piece of vinyl over damaged area (keep in place with thumbtacks). Use a razor knife to cut through both layers of vinyl deck covering. Remove damaged portion from plywood surface. Apply Ducan **ADHESIVE** to both surfaces – back side of vinyl and plywood surface. Let dry until tacky. Fit new vinyl piece in cut-out area and firmly roller into place. Then use **OVERLAP CEMENT** around perimeter of repair.


Seams or Overlap coming loose – gently pry up overlap. Apply **OVERLAP CEMENT**. Use seam roller to roll down overlap, allowing excess to squeeze out from overlap edge. Wipe excess smooth.

Ducan offers these ideas as helpful hints only. Weather, applicator skill, substrate condition, surface conditions are beyond our control. Therefore Ducan cannot be held responsible for the success or failure to correct the problem.


Need help? Call our professional customer care line – (Lower mainland) **604-942-0722** or (Toll Free) **1-800-943-8226** or visit our website at **www.ducan.com**
Please follow all label instruction carefully!
**Ducan Products Inc. #1-1921 Broadway St.
Port Coquitlam, B.C. V3C 2N1**




The colour chips shown are a close match to what the actual surface colour will be. Ducan will **not be held** responsible for any variances between the actual colour of the deck and that show in this brochure

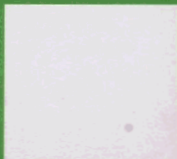


Silver Sands

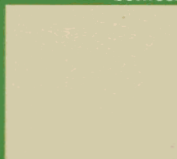


Pebble Shore

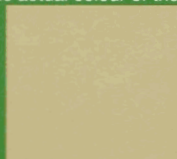

Scenic Path

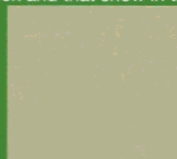

Arbour Hollow

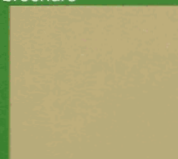

Barley Fields



Stone Mill